

playzoom™

 
 
SNAPCAM

CAMERA



Snapcam is a fun, durable and easy-to-use digital camera that takes photos and records videos. It's packed with creative tools that help you enhance your photos with a variety of frames, stamps, and funny effects.

Quick Start Guide

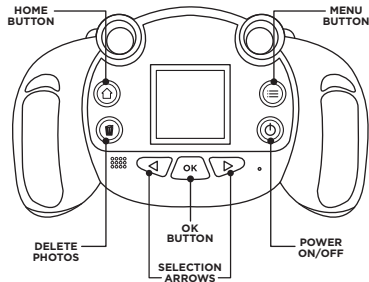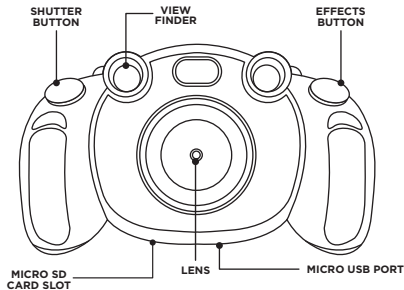

GETTING STARTED

1 INSTALL BATTERIES

Note: Adult assembly is required for battery installation.

- Locate the battery cover on the bottom of the camera.
- Unscrew and open the battery cover. Install 3 new "AAA" batteries into the camera.

2 INSTALL MICRO SD CARD (not included)

- Snapcam supports the below memory cards for memory expansion.
*microSD Logo is a trademark of SD-3C, LCC.




- Locate the memory card slot at the bottom of the camera. Insert the memory card under battery cover. Once the memory card is detected it will be set to store as the default memory automatically.
- Screw the battery cover back in place, now your Snapcam is ready to be turned on.

3 REGISTER YOUR WARRANTY

- Visit [playzoom.com/register](https://www.playzoom.com/register) to complete the form and register your product warranty.

4 ENJOY YOUR SNAPCAM CAMERA!

- Your Playzoom Snapcam is now ready to be used!

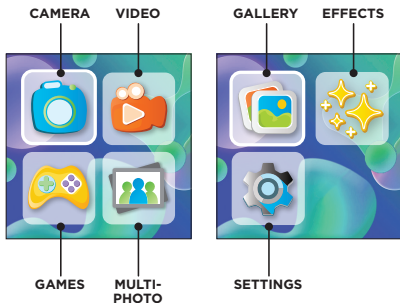

Disclaimer and Limitation of Liability

Playzoom and its suppliers assume no responsibility for any damage or loss resulting from the use of this Quick Start Guide. Playzoom and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product. Playzoom and its suppliers assume no responsibility for any damage or loss caused by deletion of data as a result of malfunction dead battery, or repairs.

Company: American Exchange Group

For customer service call **+1 (888) 200-6081**
or email us at: customerservice@playzoom.com

Important Note: Creating and developing Stem Learning products is accompanied by a responsibility that we at Playzoom take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Customer Service Line at **+1 (888) 200-6081** with any problems and/or suggestions that you might have. A service representative will be happy to help.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC ID:

WARNING: All packaging materials such as tape, plastic sheets and tags are not part of this toy, and should be discarded for your child's safety.

playzoom™

Need help? Visit us at
www.playzoom.com/help



For full user manuals and detailed features, please visit
www.playzoom.com/manuals

Connect with us!

@itouchwearables | @itouchplayzoom

